


ROSE.COM

Quick Start Guide



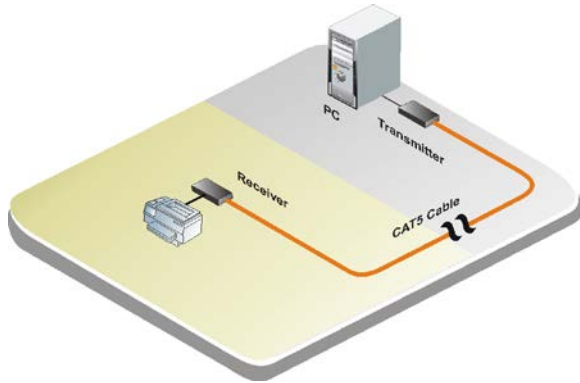

Perform the following steps to install the CrystalLink CAT5 Serial Extender

- 1- Connect the Local unit's DB9F port to the corresponding Com port on your PC using the provided DB9MM null modem cable.
- 2- Connect a compatible serial device to the Remote unit's DB9F port.
- 3- Connect the local unit to the remote unit with up to 1,000 feet (300 meters) of CAT5e cable.
- 4- Connect the power adapter to the local unit's +9VDC power jack and a power source.




Features

- Extend the distance of any compatible serial device up to 1,000 feet (300 meters) from your PC over CAT5e cable.
- Remote unit obtains its power via CAT5e cable from the local unit.
- Supports Baud rates up to 115,200
- One CAT5e cable for serial data and power to the remote unit
- Conforms to RS-232c standards

Specifications

Part Number	CLK-SLDTPD9		
Connectors	Local RS-232 – DB9F Remote RS-232 – DB9F Link – RJ45F Power – From +9VDC power adapter		
Max Baud rate	115,200 baud		
Cable Distance	1,000 feet (300 meter) Max.		
Power Adapter	120V 60Hz / 9VDC 300mA		
Power Consumption	5 Watts (max)		
Shipping Weight	Local / Remote unit – 3.0 lbs / 1.36 Kg Remote unit – 2.29 oz / 65 g		
Dimensions	Width 1.33in / 34mm	Depth 3.62in / 92mm	Height 0.87in / 22 mm

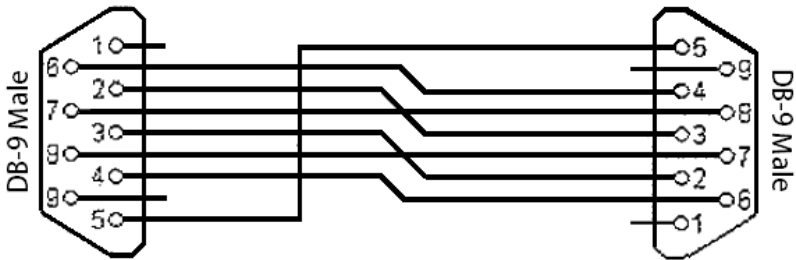

Pin	Signal
1	N/A
2	Transmit
3	Receive
4	N/A
5	Ground
6	N/A
7	Clear to send
8	Request to send
9	N/A



Server Management



Solutions

☪ **Phone: 800-333-9343** ☪ **E-mail: sales@rose.com** ☪

10707 Stancliff Rd. Houston, TX 77099

Rose Electronics – Europe: +49 2454 969442 Rose Electronics – Asia: +65 6324 2322