

CrystalView HD


KVM Extender, HDMI, USB 2.0, Audio, CAT5

ROSE.COM

INSTALLATION AND OPERATIONS MANUAL



Part Number CRK-1DXTX-HD5

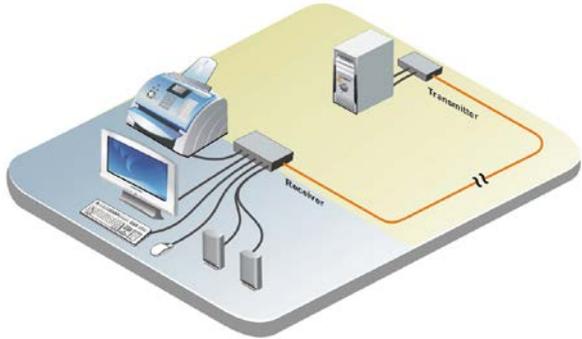

10707 Stancliff Road
Houston, Texas 77099

Phone: (281) 933-7673
WWW.ROSE.COM

LIMITED WARRANTY

Rose Electronics warrants the CrystalView HD to be in good working order for one year from the date of purchase from Rose Electronics or an authorized dealer. Should this product fail to be in good working order at any time during this one-year warranty period, Rose Electronics will, at its option, repair or replace the Unit as set forth below. Repair parts and replacement units will be either reconditioned or new. All replaced parts become the property of Rose Electronics. This limited warranty does not include service to repair damage to the Unit resulting from accident, disaster, abuse, or unauthorized modification of the Unit, including static discharge and power surges.

Limited Warranty service may be obtained by delivering this unit during the one-year warranty period to Rose Electronics or an authorized repair center providing a proof of purchase date. If this Unit is delivered by mail, you agree to insure the Unit or assume the risk of loss or damage in transit, to prepay shipping charges to the warranty service location, and to use the original shipping container or its equivalent. You must call for a return authorization number first. Under no circumstances will a unit be accepted without a return authorization number. Contact an authorized repair center or Rose Electronics for further information.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO A PERIOD OF ONE YEAR FROM THE DATE OF PURCHASE, AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THIS PERIOD. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

IF THIS PRODUCT IS NOT IN GOOD WORKING ORDER AS WARRANTED ABOVE, YOUR SOLE REMEDY SHALL BE REPLACEMENT OR REPAIR AS PROVIDED ABOVE. IN NO EVENT WILL ROSE ELECTRONICS BE LIABLE TO YOU FOR ANY DAMAGES INCLUDING ANY LOST PROFITS, LOST SAVINGS OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF OR THE INABILITY TO USE SUCH PRODUCT, EVEN IF ROSE ELECTRONICS OR AN AUTHORIZED DEALER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR FOR ANY CLAIM BY ANY OTHER PARTY.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

IBM, AT, and PS/2 are trademarks of International Business Machines Corp. Microsoft and Microsoft Windows are registered trademarks of Microsoft Corp. Any other trademarks mentioned in this manual are acknowledged to be the property of the trademark owner.

Copyright © Rose Electronics 2013. All rights reserved.

No part of this manual may be reproduced, stored in a retrieval system, or transcribed in any form or any means, electronic or mechanical, including photocopying and recording, without the prior written permission of Rose Electronics.

FCC/IC STATEMENTS, EU DECLARATION OF CONFORMITY

Product

CrystalView HD / Part number CRK-1DTXT-HD5

This equipment generates, uses and can radiate radio frequency energy and if not installed and used properly, that is in strict accordance with the manufacturer's instructions may cause interference to radio communication. It has been tested and found to comply with the limits for a Class A digital device in accordance with the specifications of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when the equipment is operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user at his own expense will be required to take whatever measures may be necessary to correct the interference.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This digital apparatus does not exceed the Class A limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of Industry Canada.

Operation is subject to the following two conditions:

- 1- This device may not cause harmful interference
- 2- This device must accept any interference received including interference that may cause undesired operation.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique publié par Industrie Canada.

CE Statement

The product meets European Standard EMC:

EN-55022:2006+A1:2007 Class A

EN 61000-3-2:2006 + A2(2009)

EN 61000-3-3:2008

EN 55024:1998 + A1(2001) + A2(2003).

IC Statement

This Class A digital apparatus complies with Canadian ICES-003.

TABLE of CONTENTS

Contents	Page #
Disclaimer	2
System introduction	2
Features	3
Package Contents	3
System Overview	4
CrystalView HD Model	5
Transmitter and receiver indicators	8
CrystalView HD Installation	9
Installation Verification (Refer to Table 1)	10
USB Device Installation	10
Operating the CrystalView HD	10
Maintenance and Repair	12
Technical Support	12
Product Safety	13

Figures	Page #
Figure 1. Model	5
Figure 2. Connectivity Diagram	10

Tables	Page #
Table 1. LED Descriptions	8

Appendices	Page #
Appendix A – General Specifications	14
Appendix B – Part numbers	15
Appendix C – Recommended Equipment	16

Disclaimer

While every precaution has been taken in the preparation of this manual, the manufacturer assumes no responsibility for errors or omissions. Neither does the manufacturer assume any liability for damages resulting from the use of the information contained herein. The manufacturer reserves the right to change the specifications, functions, or circuitry of the product without notice.

The manufacturer cannot accept liability for damages due to misuse of the product or other circumstances outside the manufacturer's control. The manufacturer will not be responsible for any loss, damage, or injury arising directly or indirectly from the use of this product.

System introduction

Thank you for choosing the Rose Electronics® CrystalView™ HD extender. The CrystalView HD is the KVM extender of choice for businesses that need to extend and operate a computer, server, or KVM switch from a distance. The CrystalView HD makes this possible by the use of CAT5 cable. You can fully operate and control a computer or server from 330 feet away (100m)). The CrystalView HD supports a wide variety of HDMI® monitors and video cards. Up to 3 USB peripherals, such as a keyboard, mouse, speakers, printers, USB mass storage devices and web cameras can be directly connected to the receiver's USB ports. Additional USB devices can be connected using a USB hub. Up to 13 USB devices and 4 USB hubs are supported.

The system consists of two Units, a transmitter and a receiver. The transmitter connects to your CPU's USB port and the HDMI® display connector. The receiver normally connects to a HDMI® video monitor, a USB keyboard, a USB mouse, and one other USB device or a USB hub. The transmitter and receiver are connected together with industry standard CAT5 cable. The receiver unit can be up to 330 feet (100m) from the transmitter.

Using the CrystalView HD to remotely access your computer has several advantages over conventional extenders. The CrystalView HD can access computers used in hazardous industrial environments. This keeps the users safe and unexposed to any hazards. It can also be used for interactive digital signage, remote touchscreen applications and medical environments.

Features

- Supports HDMI[®] video and audio
- Extend your workstation, USB devices, and audio up to 330 feet (100m) over industry standard CAT5 UTP solid core cable.
- Uncompressed video resolutions up to 1920x1200, 24-bit color depth are supported at distances up to 330 ft (100m). The resolution does not degrade over all supported distances.
- Supports all USB 2.0 devices including keyboards, mice, web cams, flash drives, speakers, microphones, and other USB devices
- Operates with both USB 2.0 high-speed host controllers and USB 1.1 host controllers.
- Standard USB hubs can be used to increase the maximum number of connected USB devices to 13.
- Up to 500 ma of power is available at each USB port on the receiver unit for powering high-power USB devices
- Plug-and-Play installation, no configuration or set-up needed.
- Installation consists of:
 1. Connecting the receiver to your HDMI[®] monitor, USB keyboard and mouse, and other USB device(s)
 2. Connect the transmitter to your computer's HDMI[®] display port, and USB 2.0 or 1.1 port
 3. Connect the transmitter to the receiver with up to 330 feet (100 meters) of CAT5 UTP cable
 4. Apply power and the installation is complete

Package Contents

The package contents consist of the following:

- The CrystalView HD units (Transmitter and Receiver)
- 2 power adapters (+5VDC)
- Documentation CD


Other cables can be ordered separately. If the package contents are not correct, contact Rose Electronics or your reseller so the problem can be quickly resolved.

System Overview

The CrystalView HD system consists of two units; a transmitter and a receiver. The transmitter connects to your computer's HDMI[®] video connector and a USB Type A connector. The receiver connects to an HDMI[®] display, and three USB devices. The transmitter and receiver units are connected together with up to 330 feet of CAT5 or better UTP cable.

Normally two of the USB devices are a USB keyboard and USB mouse. The other USB port can connect to another USB device such as a USB printer, scanner, USB hard drive, web cam, and many other compatible USB devices. If more than three USB devices need to be connected, you can connect up to 4 USB hub levels and 13 USB devices max to the unit. Keep in mind that each of the three USB ports on the receiver supplies a maximum of 500 ma per port. If you connect a four port hub to the unit, the hub receives 500 ma or 125ma per USB port. A powered hub may be needed if you have several high power USB devices that only use the USB port power.

See Appendix C for a list of recommended devices to use in a system

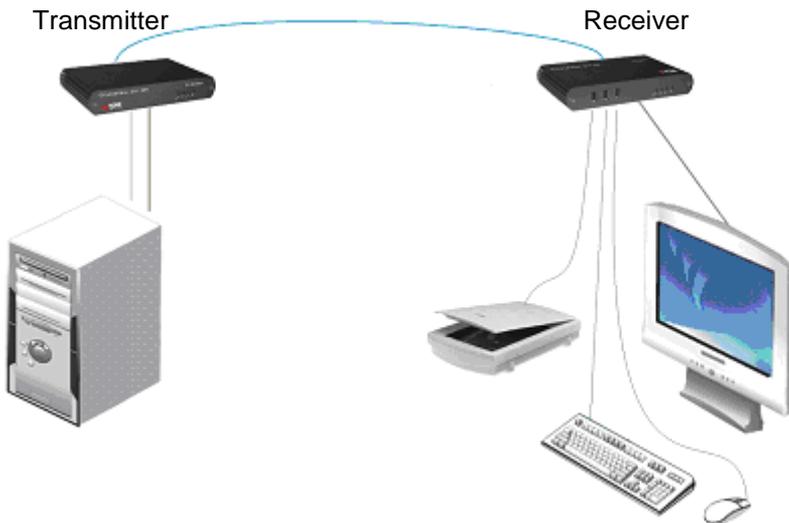

CrystalView HD Model



Transmitter Front View

LED Indicators*

- Status
- Link
- / ● Video
- / ● USB



Transmitter Rear View

Connectors

- HDMI In – Video/Audio In
- Config – Reserved
- USB – Type B
- Link – RJ45
- Power - +5V, 3A adapter



Receiver Front View

LED Indicators*

- Status
- Link
- / ● Video
- / ● USB



Receiver Rear View

Connectors

- HDMI Out – Video/Audio Out
- Config – Reserved
- USB – Type A (3)
- Link – RJ45
- Power - +24V, 1A adapter

Figure 1. Model

* See Table 1 for LED indicator definitions

Transmitter and receiver indicators

Description applies to both the transmitter and receiver unless specified otherwise.

Indicator	Description
Status (Green LED)	On – System ready Blinking – System being configured – not ready Off – No power to the unit
Link (Green LED)	On – Valid link between the transmitter and receiver Off – No link between the transmitter and receiver
Video (Green / Amber LED)	<p>Transmitter</p> <p>On (Green) – Valid link from the host computer to the transmitter to the Receiver</p> <p>Blinking (Green) – Video is being transmitted between the transmitter and receiver</p> <p>On (Amber) – Video source not detected at the transmitter</p> <p>Blinking (Amber) – Over current detected at one or more receiver USB ports</p> <p>Off – No link between the transmitter and receiver</p>
	<p>Receiver</p> <p>On (Green) – Valid link from the transmitter and from the monitor</p> <p>Blinking (Green) – Video is being transmitted between the transmitter and receiver</p> <p>On (Amber) – Monitor not detected at the receiver HDMI Video out port or the monitor is not compatible</p> <p>Blinking (Amber) – Invalid resolution detected</p> <p>Off – No link between the transmitter and receiver</p>
USB (Green / Amber LED)	<p>On (Green) – System properly enumerated on the host computer</p> <p>Blinking (Green) – USB data is being transmitted between the transmitter and receiver</p> <p>On (Amber) – USB source not detected at the transmitter</p> <p>Blinking (Amber) – Over current detected at one or more receiver USB ports</p> <p>Off – No link between the transmitter and receiver</p>

Table 1. LED Descriptions

CrystalView HD Installation

It is recommended that initially, power to all equipment be off. Refer to Figure 2 for a typical system installation diagram.

Installation of the CrystalView HD consists of:

1. Connect a USB cable from the transmitter's USB Type B connector to an unused USB 2.0 or 1.1 Type A port on the computer
2. Install an HDMI cable to the transmitter's HDMI IN connector and to the HDMI connector on the computer
3. Connect your remote monitor to the receiver's HDMI OUT port
4. Connect a USB keyboard and USB mouse to two USB Type A ports on the receiver unit
5. Install a compatible USB device to a USB Type A port on the receiver unit. (Up to 4 hub levels can be installed, and 13 USB devices)
6. Connect up to 330 feet of CAT5 UTP or better cable between the Link port on the transmitter and the Link port on the receiver unit

NOTE: It is recommended that only CAT5 or better UTP solid core wire cabling terminated with 8 conductor RJ45 connectors on both ends be used. The combined length of any patch cords using stranded conductors must not exceed 33 feet (10 meters). With surface and premise cabling, do not exceed the max cable length specification of 330 feet.

Connecting / applying power

7. Connect a 5V, 3A power adapter to an AC outlet and to the Transmitter unit
8. Connect a 5V, 3A power adapter to an AC outlet and to the Receiver unit
9. Turn on the remote monitor and boot the computer. Wait for approximately one minute for the CrystalView HD units to initialize

NOTE: Use only the provided DC power adapters with this product. Using substitute adapters may cause permanent damage to the units and will void the warranty.

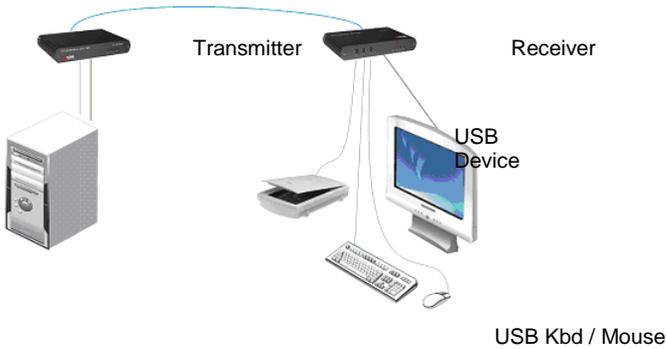


Figure 2. Connectivity Diagram

Installation Verification (Refer to Table 1)

Check that the Status, Link, Video, and USB LEDs on the transmitter and receiver units are on. Verify that the USB and Video LEDs are blinking.

USB Device Installation

Normally Windows XP, Vista, and Windows 7 operating system will recognize a new USB device when it is connected to a USB port and correctly install the needed software or drivers to properly access and use the new device. If your USB device requires special software to operate, install the software first as outlined in the manufacturers documentation, then connect the new USB device to a USB Type A connector on the receiver unit. Verify that the USB device is detected and installed properly.

Operating the CrystalView HD

Operating your CrystalView HD system is no different than being connected directly to your computer. The only difference is the computer you are accessing is no longer on your desk but up to 330 feet away.

Any installed software application can be executed; results printed and saved.

The Status, Link, Video, and USB LEDs on the transmitter and receiver will indicate any problems with the connections or unit. Please refer to Table 1 for a description of the different LED conditions that may occur.

All LEDs on the Transmitter / Receiver unit are off

- Verify that the power adapters are properly connected and supplying +5V DC to the transmitter and to the receiver

All LEDs on both the Local Extender unit and Remote Extender unit are on, but the USB device does not operate correctly or is detected as an “Unknown Device” in the operating system.

- Disconnect the KVM extender product from the computer and connect the USB device directly to the USB port on the computer. If the device does not operate properly, consult the user documentation for the device.
- Update your system BIOS, chipset or USB Host controller drivers from your System/Mother board manufacturer’s website.
- Make sure the Operating System has all the latest updates installed.
- If the device operates properly when directly connected to the computer, connect another device (of a different type) to the KVM extender product. Connect the KVM extender product to the computer.
- If the second device does not operate, the KVM extender product may be malfunctioning. Contact technical support for assistance.
- If the second device does operate properly, the first device may not be compatible with the KVM extender product.

Specific resolution doesn’t show in the graphics/video settings

- Latest video drives are not installed or resolution is not supported.
- The specific resolution is not listed by the monitors EDID and is therefore not supported with the KVM extender product. See appendix C.

Maintenance and Repair

This Unit does not contain any internal user-serviceable parts. In the event a Unit needs repair or maintenance, you must first obtain a Return Authorization (RA) number from Rose Electronics or an authorized repair center. This Return Authorization number must appear on the outside of the shipping container. See Limited Warranty for more information.

When returning a Unit, it should be double-packed in the original container or equivalent, insured and shipped to:

Rose Electronics
Attn: RA _____
10707 Stancliff Road
Houston, Texas 77099 USA

Technical Support

If you are experiencing problems, or need assistance in setting up, configuring or operating your product, consult the appropriate sections of this manual. If, however, you require additional information or assistance, please contact the Rose Electronics Technical Support Department at:

Phone: (281) 933-7673
E-Mail: TechSupport@rose.com
Web: www.rose.com

Technical Support hours are from: 8:00 am to 6:00 pm CST (USA), Monday through Friday.

Please report any malfunctions in the operation of this Unit or any discrepancies in this manual to the Rose Electronics Technical Support Department.

Product Safety

The CrystalView HD extender has been tested for conformance to safety regulations and requirements, and has been certified for international use. Like all electronic equipment, the CrystalView HD should be used with care. To protect yourself from possible injury and to minimize the risk of damage to the Unit, read and follow these safety instructions.

- Follow all instructions and warnings marked on this Unit.
- Except where explained in this manual, do not attempt to service this Unit yourself.
- Do not use this Unit near water.
- Assure that the placement of this Unit is on a stable surface or rack mounted.
- Provide proper ventilation and air circulation.
- Keep power cord and connection cables clear of obstructions that might cause damage to them.
- Use only power cords, power adapter and connection cables designed for this Unit.
- Use only a grounded (three-wire) electrical outlet.
- Use only the power adapters provided with the CrystalView HD.
- Keep objects that might damage this Unit and liquids that may spill, clear from this Unit. Liquids and foreign objects might come in contact with voltage points that could create a risk of fire or electrical shock.
- Operate this Unit only when the cover is in place.
- Do not use liquid or aerosol cleaners to clean this Unit. Always unplug this Unit from its electrical outlet before cleaning.
- Unplug this Unit from the electrical outlet and refer servicing to a qualified service center if any of the following conditions occur:
 - The power cord or connection cables are damaged or frayed.
 - The Unit has been exposed to any liquids.
 - The Unit does not operate normally when all operating instructions have been followed.
 - The Unit has been dropped or the case has been damaged.
 - The Unit exhibits a distinct change in performance, indicating a need for service.

Appendix A – General Specifications

Range	330 feet (100 meters) over Cat 5e (or better) cable
USB device support	High-speed devices (480 Mb/s-USB 2.0) Full speed devices (12 Mb/s-USB 2.0/1.1) Low speed devices (1.5 Mb/s-USB 2.0/1.1)
USB hub support	Up to 4 USB hubs
USB host support	EHCI (USB 2.0) and OHCI/UHCI (USB 1.1)
Max USB devices supported	13 USB devices
DC adapter(s) Transmitter	Input: 100/240 V AC, 50 – 60 Hz Output: 5V DC, 3A (15 W)
Receiver	Input: 100/240 V AC, 50 – 60 Hz, Output: 5V DC, 3A (15 W)
Power available to USB devices at the receiver unit	500 mA each port
Local Extender	
Video Connector	HDMI® In (19-pin connector)
USB connector	1 x USB Type B
Link connector	1 x RJ45
Dimensions	4.4" x 6.9" x 1.18" (112 mm x 175 mm x 30 mm)
Remote Extender	
Video Connector	HDMI® Out (19-pin connector)
Link connector	1 x RJ45
USB connector	3 x USB Type A
Dimensions	4.4" x 6.9" x 1.18" (112 mm x 175 mm x 30 mm)
Operating temperature range	0°C to 40°C (32°F to 104°F)
Storage temperature range	-20°C to 70°C
Operating humidity	20% to 80% relative humidity, non-condensing
Storage humidity	10% to 90% relative humidity, non-condensing
Regulatory testing	FCC Part 15 (Class A), CE (Class A), ICES-003
ESD rating	EMC EN-61000-4-2 4kV Contact, 8kV Air

Appendix B – Part numbers

Part Number	Description
CRK-1DTXT-HD5	HDMI, USB 2.0, CAT5 Kit
CRV-SLDTXT-HD5	Local unit
CRV-SRDTXT-HD5	Remote unit
CAB-HDMIMMnnn	HDMI mm cable
CAB-USBABnnn	USB type A/B cable

Appendix C – Recommended Equipment

The following list of devices is recommended for use in the system:

Monitors Samsung Viewsonic ASUS Dell	Acer HP BENQ
Graphic cards NVIDIA ION Matrox P-series NVIDIA Quadro Series NVIDIA Geforce Mobility 9000	ATI Radeon HD 2000 series and above Intel GMA 950 and GMA HD ATI FireGL/FirePro series NVIDIA Geforce 6000 series and above
Operating Systems Windows 7 (32 / 64 bit) Windows Vista (32 / 64 bit) Windows XP (32 bit)	Mac OS X (Leopard/Snow Leopard) Linux
Peripherals Keyboard Mouse Speakers Printer	Scanners Mass Storage Devices Web Cam (High Compression/Low Res) DAQs
Resolutions / aspect ratio 640 x 480 / 4:3 800 x 600 / 4:3 1024 x 768 / 4:3 1280 x 720 / 16:9 1280 x 768 / 5:3 1280 x 800 / 16:10	1280 x 1024 / 5:4 1360 x 768 / 16:9 1366 x 768 / 16:9 1440 x 900 / 16:10 1680 x 1050 / 16:10



Server Management



Solutions